 


Non-Glossy Plotter Paper

Ideal for everyday and quantity use, this non-glossy paper has been especially designed to provide top performance when used with HP's fiber-tip paper pens.


1 Before you begin

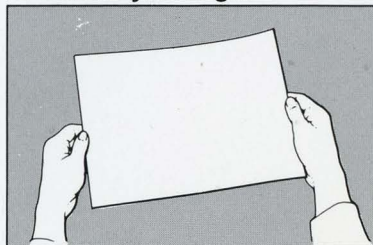

- *Leave paper in package until ready to use.* This will prevent dust from accumulating, and will ensure crisp, clear graphics.
- *Handle paper only along the edges.* The paper surface must be free of fingerprints for ink to adhere properly.
- *Paper is packed with best writing side up.*


2 Loading the paper

For HP 7220, 7221, 7225, and 9872 plotters

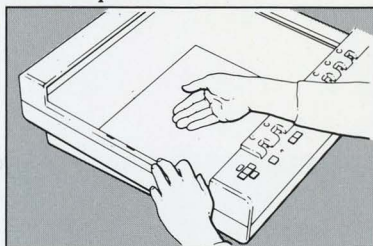


Press "Chart Load" button. Place paper on platen. Smooth away air bubbles with the back of the hand. Press "Chart Hold" button.

 For HP 7550 plotter

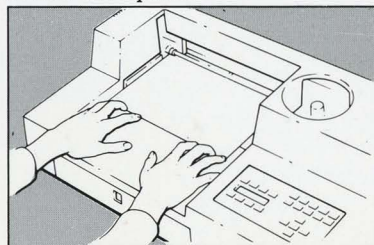


Manual loading — Place paper on platen. Move paper until it is flush with left edge of platen and aligns with A/A4 mark (or B/A3 mark, if appropriate) on platen. Both upper edges of paper must be under grit wheels. Press "Auto Feed" key until an asterisk appears on display directly beneath "Auto Feed" key. Press "Load/Unload" key.

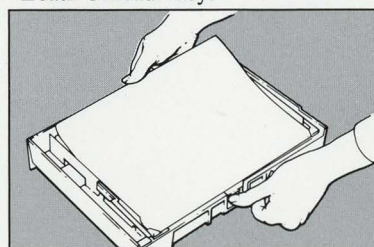


Automatic loading — Remove paper tray (be sure tray and paper size correspond). Press down black tab in rear of tray and insert paper (150 sheets maximum). Paper corners must be under tabs. Slide tray into plotter. Press "Auto Feed" key until an asterisk appears on display directly beneath "Auto Feed" key. Press "Load/Unload" key.

 For HP 7090, 7470, and 7475 plotters

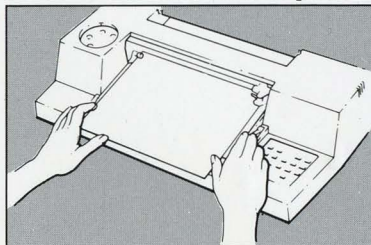

Place paper on platen. Raise loading lever to the "Paper Load" position. Move paper until it sits squarely against paper stop or against white line. Lower lever to "Paper Hold" position.

For ColorPro plotter

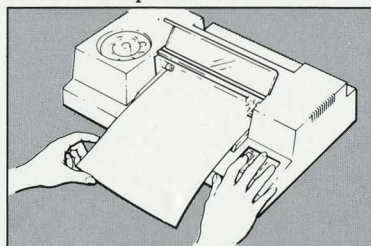

Place paper on platen. Move paper until it is flush with white line on platen. Press "Load" button.

For instructions on loading non-glossy paper in your HP drafting plotter, consult your User's Manual.

3 Setting plotter speed

Use a maximum speed of 50 cm/s (HP-GL command "VS 50").

4 Tips for better charts

Text charts

- Use darker colors for lettering.
- For titles, use wide-line (0.7 mm) pens.
- For labels, use narrow-line (0.3 mm) pens.

 
Line charts

- Use wide-line pens to enable viewer to distinguish data easily.

Solid-fill areas

- For smoothest area fills, use narrow-line pens.

5 Storing finished plots

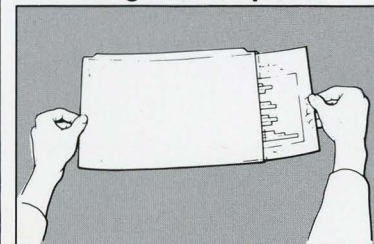

Keep plots in a folder away from light. Place a blank sheet of paper between plots.

6 HP plotter supplies

Get best results from your Hewlett-Packard plotter with genuine HP supplies. HP offers a complete line of plotter supplies: new transparency film, glossy paper, and non-glossy paper, as well as new fiber-tip transparency pens and fiber-tip paper pens, both available in 10 new colors and 2 line widths.

7 When it's time to reorder

Just visit your nearby Hewlett-Packard computer dealer (in the U.S.A., call 1-800-FOR-HPPC for the dealer nearest you). Or shop by phone:

United States	(800) 538-8787
California,	(408) 738-4133
Alaska, and Hawaii	
Australia	(03) 895-2645
	(03) 895-2615
	(03) 895-2815
	(03) 895-2861
Austria	(0222) 2500-615
	(0222) 2500-616
Belgium/Luxembourg	(02) 761 31 11
Canada	
Toronto Local	416-671-8383
Ontario	1-800-387-3417
Quebec	1-800-387-3417
British Columbia	112-800-387-3154
Other Provinces	1-800-387-3154
Denmark	(02) 816640, Ext. 258
Finland	(90) 887 2361
France	(1) 69 28 32 64
Greece	(01) 6726090
Italy	(02) 9236 9702
Japan	
Sagamihara	0427 59 1311
Osaka	(06) 304 6021
Middle East/Athens	(01) 6828811
Norway	(02) 24-60 90
South Africa	
Johannesburg	(011) 8025111
Cape Town	(021) 537954
Spain	(91) 6374013
	(91) 6370011
Sweden	(08) 7502400
Switzerland	(057) 31 22 53
	(057) 31 22 54
	(057) 31 22 59
The Netherlands	(020) 547 6606
United Kingdom	(0734) 697201
West Germany	(0130) 3322